



## Ten Golden Rules for Correct Saniflo Installation

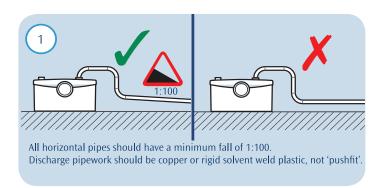


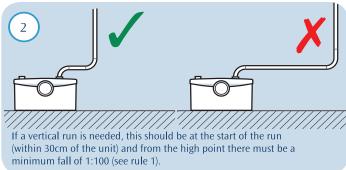

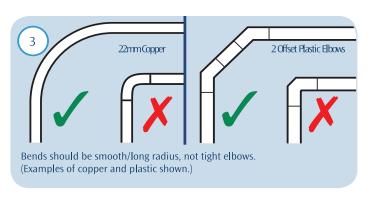



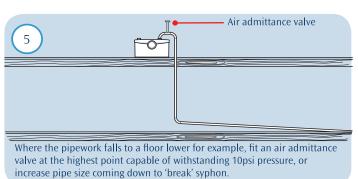

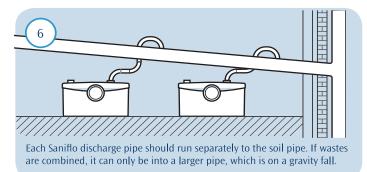






maintenance being required. If boxed in, the boxing should be easily removed. Any extension between the WC pan spigot and wall should not exceed 150mm.

As close coupled cistern dimensions vary it may be necessary with certain designs to utilise a spacer between cistern and wall



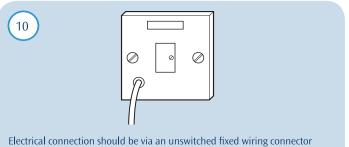

with a 5 amp fuse.